

Exchange unit

for HELICOIL® pneumatic and electrical installation tool

Exchange unit for leader cartridge tools to process HELICOIL® Plus Free Running and HELICOIL® Plus Screwlock thread inserts with coarse threads.

An exchange unit comprises the leader cartridge, an installation mandrel, a coupling and compensation washers.

Suited for:

- P-PSG 256 pneumatic installation tool
- E-PSG 256 electrical installation tool

Technical information can be found on the last page.



Diameter (d)	Article number	Pitch (P)
M 2.5	01602725050	0.45
M 3	01602703050	0.50
M 4	01602704050	0.70
M 5	01602705050	0.80
M 6	01602706050	1.00

All technical data refer to the measure mm



HELICOIL® Plus thread inserts



W and d_1 are the control values for thread inserts (Free Running and Screwlock) before they have been installed. The length can only be measured for installed thread inserts.

Holding thread



Assembly



Prior to tapping, counter-bore 90° and deburr.
Outside diameter of **countersink** = $D_{HC} + 0.1 \text{ mm}$.

- | | |
|---|--|
| d = Nominal thread diameter | t_1 = Minimum depth of tapped hole according to DIN 76 – Part 1 (guide value) |
| P = Thread pitch | t_2 = The nominal length of the thread insert corresponds to the minimum length of the full parent thread for blind holes or the minimum plate thickness for a through hole. |
| d_1 = Outside diameter of thread insert prior to installation | t_3 = Maximum screw-in depth when the tang is not removed |
| W = Number of threads prior to installation | t_5 = Distance of the thread insert from the joint face = 0.25 to 0.5 P, if t_2 corresponds to the above-mentioned minimum value |
| D_{HC} = Outside diameter of the parent thread | |
| D_{1HC} = Crest diameter | |
| B = Suitable twist drill diameter. Please note: D_{1HC} is critical for selecting the correct twist drill diameter. | |

When you use HELICOIL® Plus thread inserts for volume production, we recommend to add at least $1 \times P$ to values t_1 and t_2 .